



Montageanleitung

Artikel-Nr. : **507T068A**
Produkt : **Kotflügel, hinten**
Marke : **Triumph**
Modell (Typ) : **Street Twin '16 -**


Wichtige Hinweise:

Lesen Sie die Anleitung sorgfältig durch und beachten Sie alle Sicherheitshinweise. Führen Sie diese Montage nur durch, wenn Sie dafür qualifiziert sind, andernfalls empfehlen wir dringend die Montage in einer Fachwerkstatt. Ein fehlerhafter Anbau kann das Fahrverhalten des Motorrads negativ beeinflussen und Ihre Gesundheit und Ihr Leben gefährden.

Produktempfehlung: Rücklicht - LSL, Art.-Nr.: 730CL01SW. Sehen Sie die Befestigungspunkte für das Rücklicht vor, bevor die Endmontage des Kotflügels erfolgt.


Montage:

Montieren Sie den mitgelieferten Halter an den Kotflügel wie unten gezeigt.

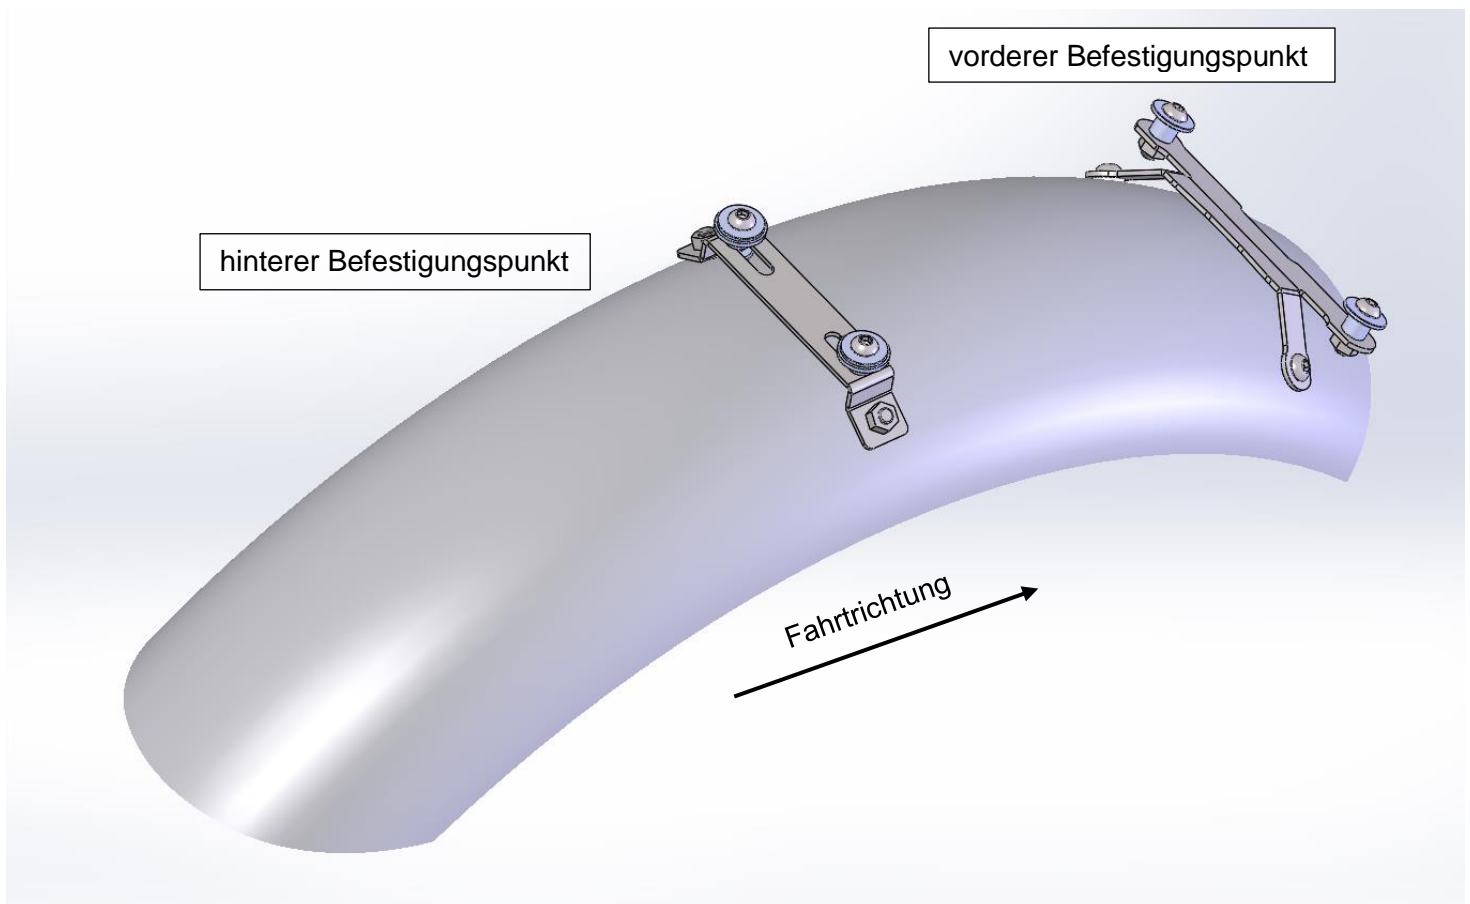

Richten Sie den hinteren Kotflügel Ihrem Wunsch entsprechend aus,
bohren jeweils 6,5mm Löcher, entgraten diese.

Montieren Sie die mitgelieferten Halter an denen von Ihnen gebohrten Löchern und montieren Sie
dann den Kotflügel an Ihrem Fahrzeugs nach folgendem Schema:

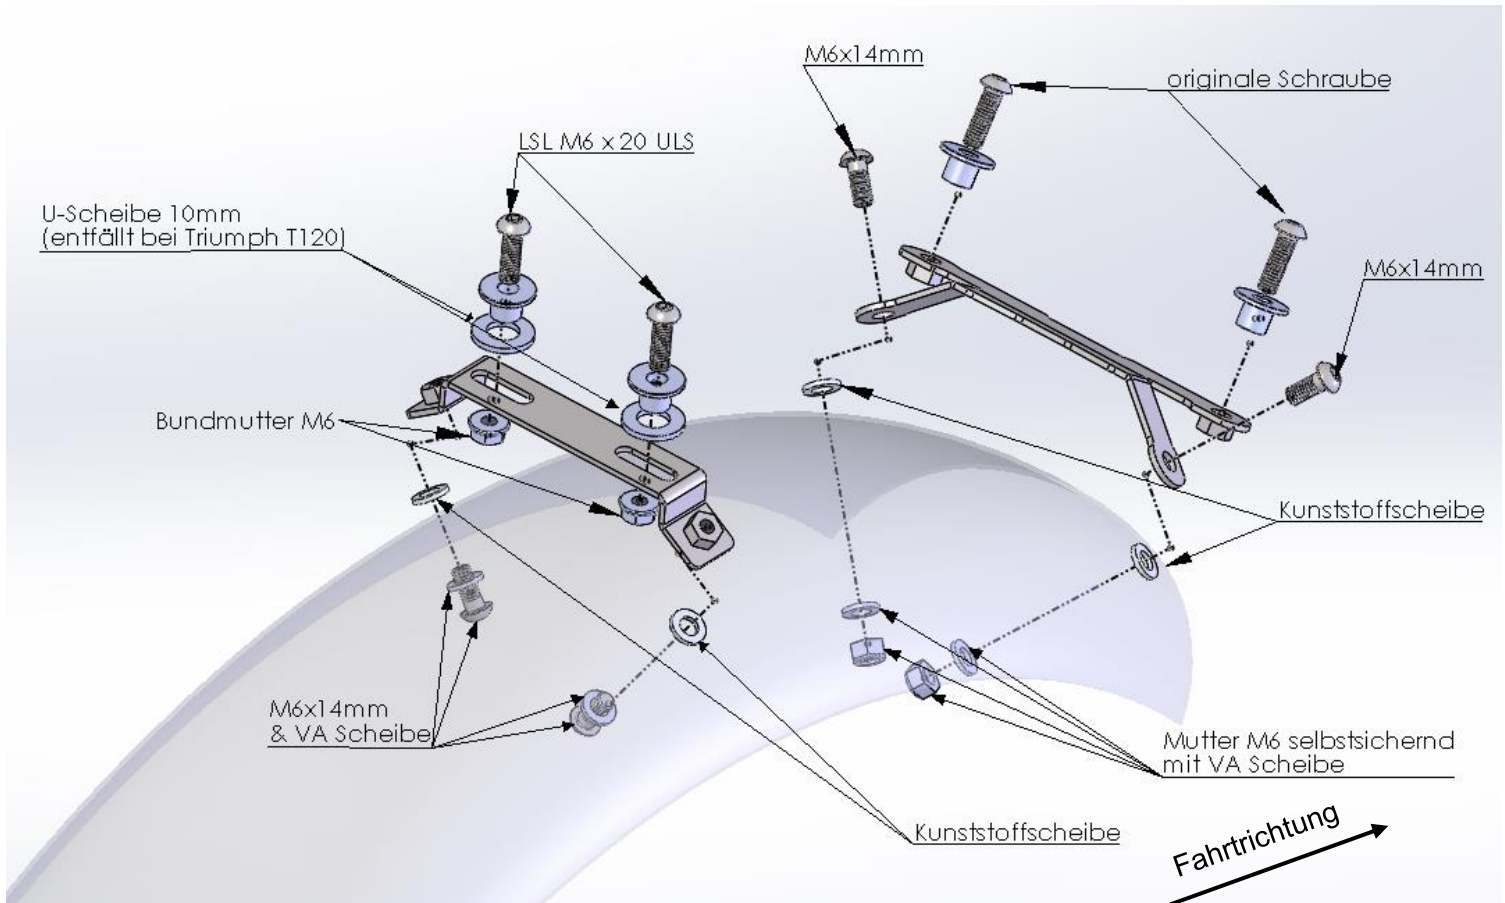

Verwenden Sie für den **vorderen** Kotflügelhalter die **originalen Befestigungsschrauben**

Verwenden Sie für den **hinteren** Kotflügelhalter die gelieferten **M6x20mm ULS** Schrauben.

Kontrollieren Sie alle Schrauben auf festen sitzt, achten Sie dabei darauf,
die Schrauben nicht zu fest anzuziehen, da Sie sonst den Kotflügel verbiegen!

Wir wünschen Ihnen viel Freude beim Fahren!



Fitting Instruction

Article-No. : **507T068A**
Product : **rear fender**
Brand : **Triumph**
Model (Type) : **Street Twin '16-**


Important:

Read this instruction manual carefully and mind all warnings and tips. You should do this work only if you're qualified; otherwise we recommend this mounting to be done by a qualified workshop. Improperly mounting of this kit can reduce the driveability of the motorcycle and may be a risk to your health and life.

Product recommendation: LSL, Art.-No.: 730CL01SW


Fitting:

Install the supplied fender bracket as shown below.

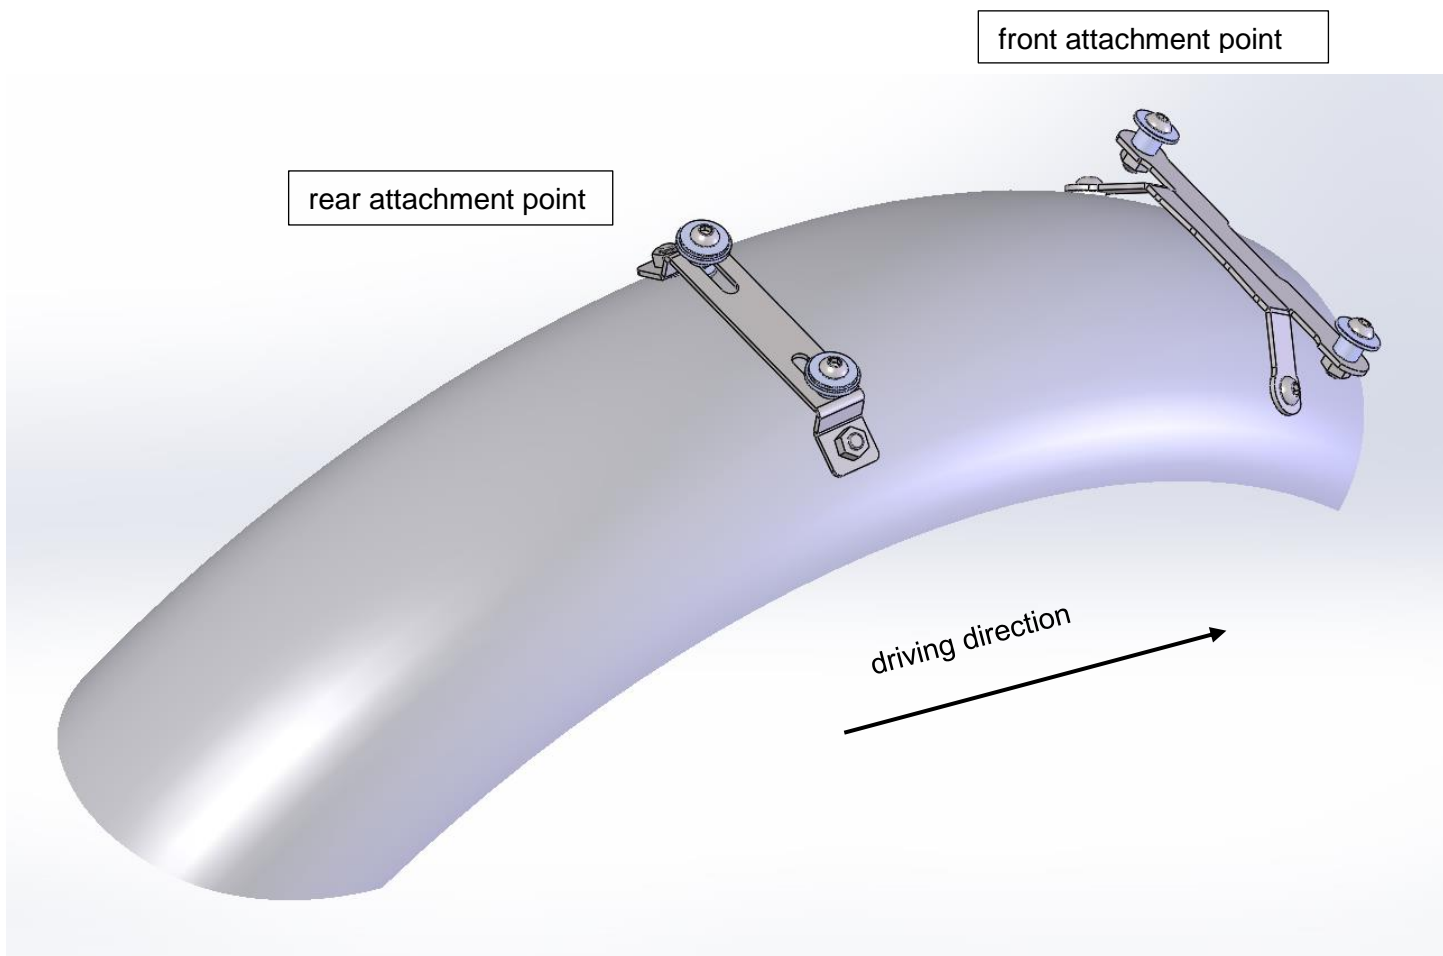

Align the rear fender of your option,
Drill holes each 6.5mm, deburring this.

Install the supplied bracket on which the drilled holes from you and then mount the fender to your vehicle according to the following scheme:

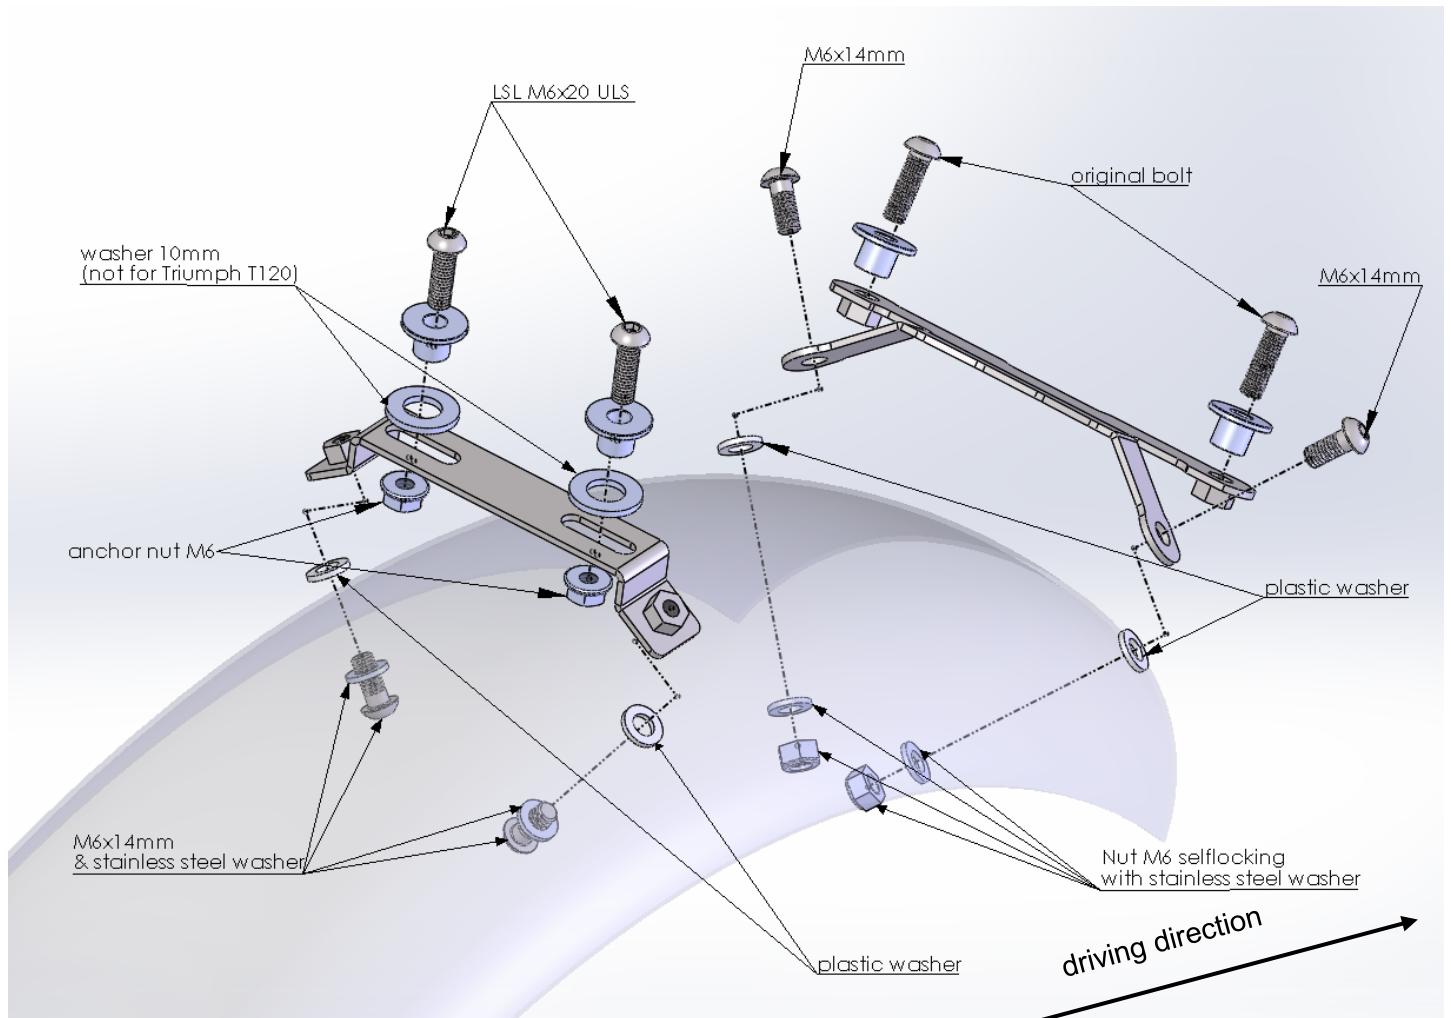

Use the **original bolts** and washer for the **front bracket**.

Use the **LSL bolts M6x20mm ULS** for the **rear bracket**.

Check all bolts for proper seat, be careful **not to over-tighten the bolts**, otherwise you will bend the fender!

Ride safe and have fun!