

Important: If you are not a trained motorcycle mechanic stop now. Ask a local motorcycle shop to do the work for you.


Please take special care!

The Crash-Pads has to be mounted one side after the other! Don't release both engine bolts at the same time!

Attention: Mark the left fairing inside, drill a small hole and check, if the drill and the fitting point are aligned!




Fitting on the right side

(view from rear)

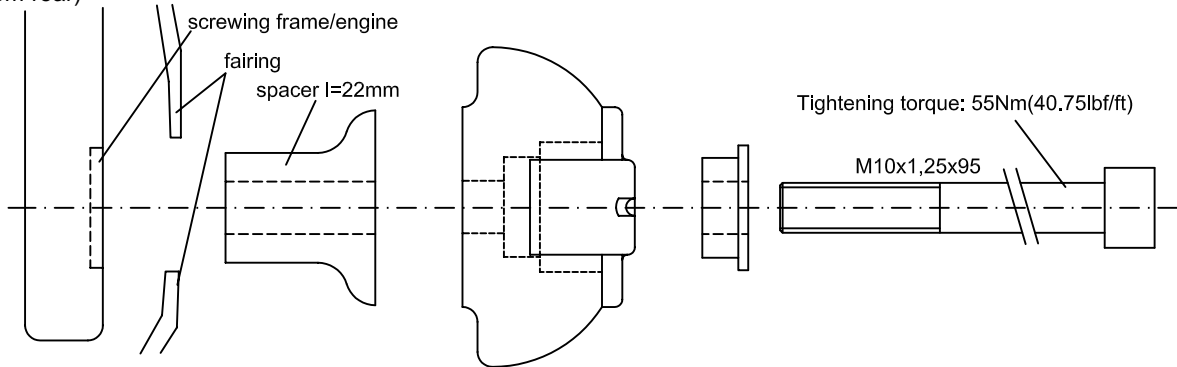

Fitting on the left side

(view from rear)

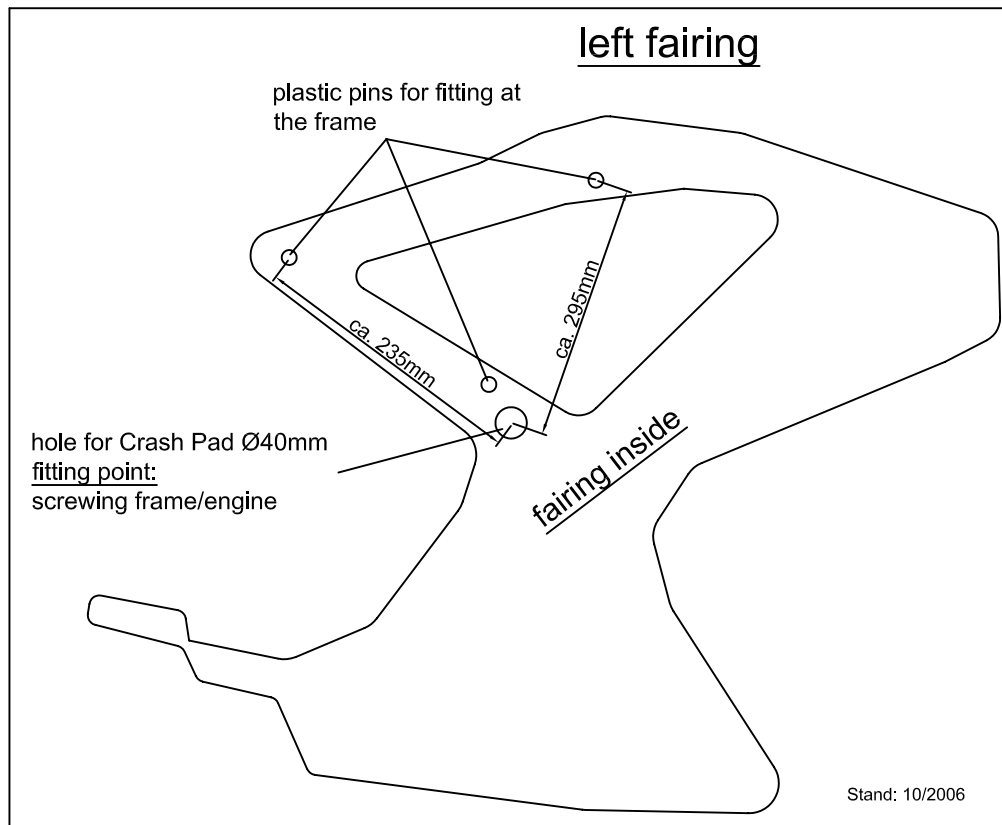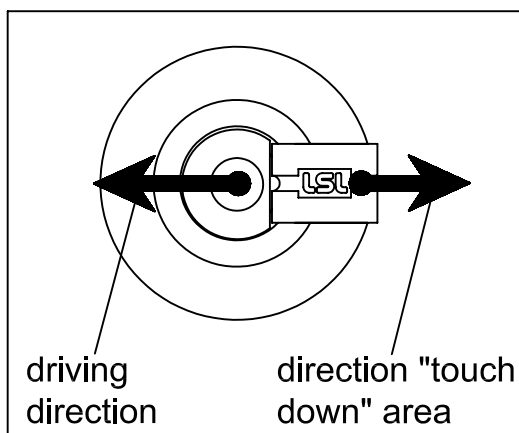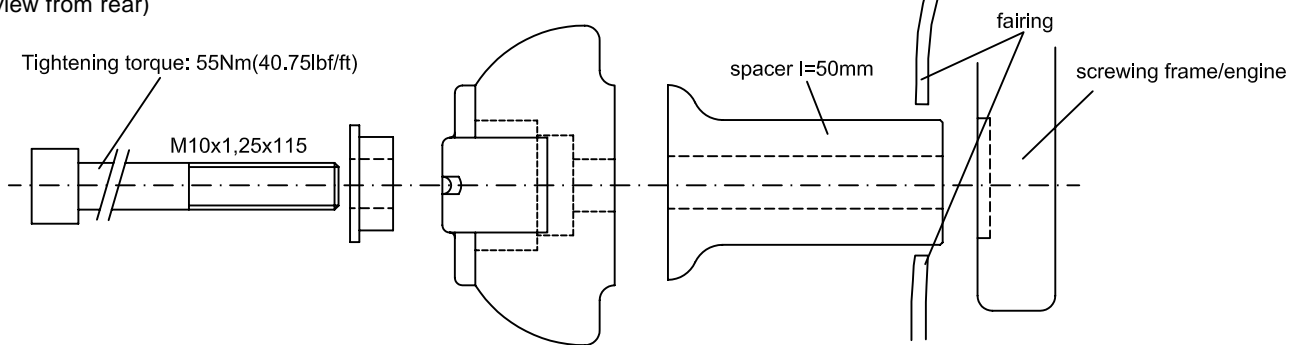

Instructions de montage des Crash Pads pour Suzuki GSX-R 600/750 '06 →

N° article : 444258


Important: Le montage doit être fait par un professionnel.

Le montage des Crash-Pads s'effectue d'abord d'un côté et ensuite de l'autre! Evitez le desserrage simultané des deux vis tenant le moteur!

Attention : Marquer l'intérieur du carénage gauche, effectuer un petit perçage et contrôler s'il coïncide avec le point de fixation.




Montage côté droit:

(Vue arrière)

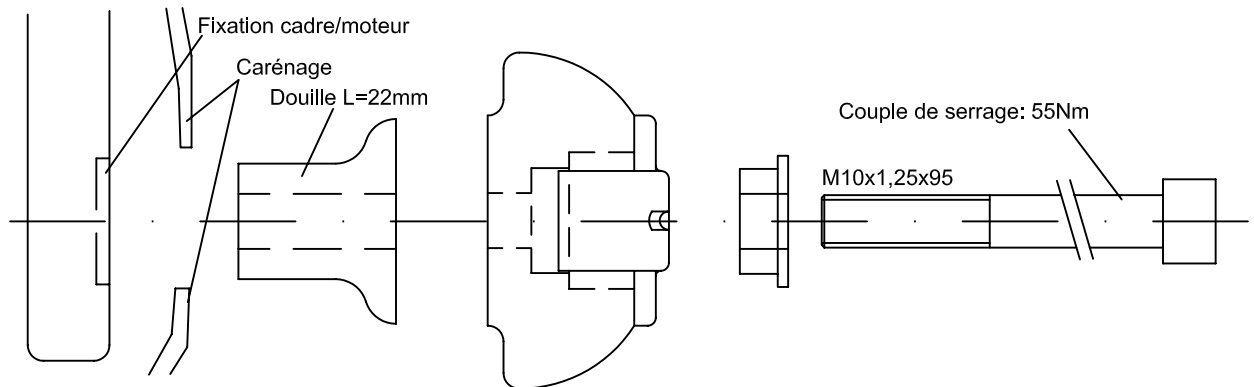

Montage côté gauche:

(Vue arrière)

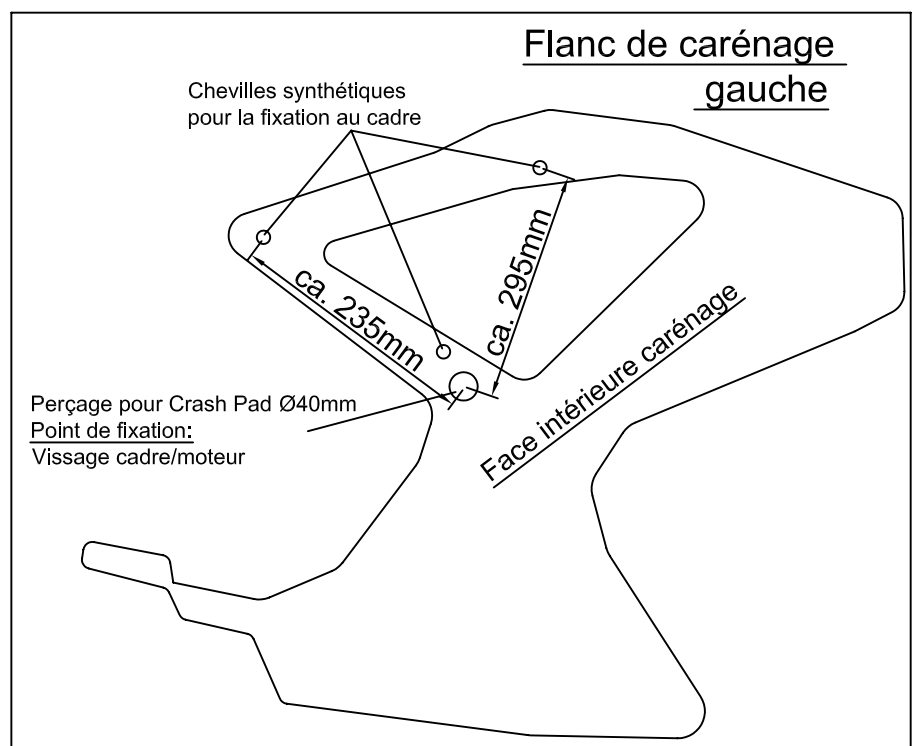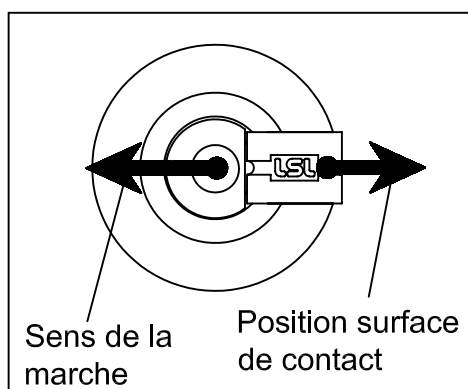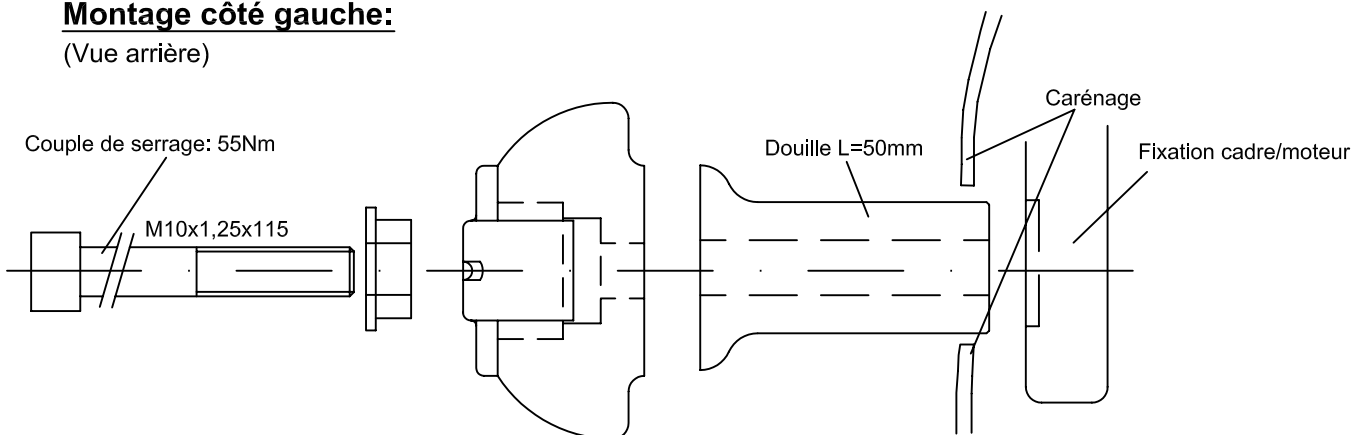

LSL
MAKING GOOD BIKES PERFECT

Paaschburg & Wunderlich GmbH · D-21509
www.lsl.eu



MAKING GOOD BIKES PERFECT

Paaschburg & Wunderlich GmbH · D-21509
www.lsl.eu