

Anbauhinweise für Crash- Pads Triumph Speed Triple T955i `05- Art.Nr.: 550T033


Wichtig: Wenn Sie kein ausgebildeter Mechaniker sind, wenden Sie sich bitte an eine Fachwerkstatt.

Bitte unbedingt beachten!


Die Montage der Crash-Pads muss seitenweise erfolgen!

Das gleichzeitige Lösen der beiden Motorbefestigungsschrauben ist zu vermeiden!

Anbau der rechten Seite

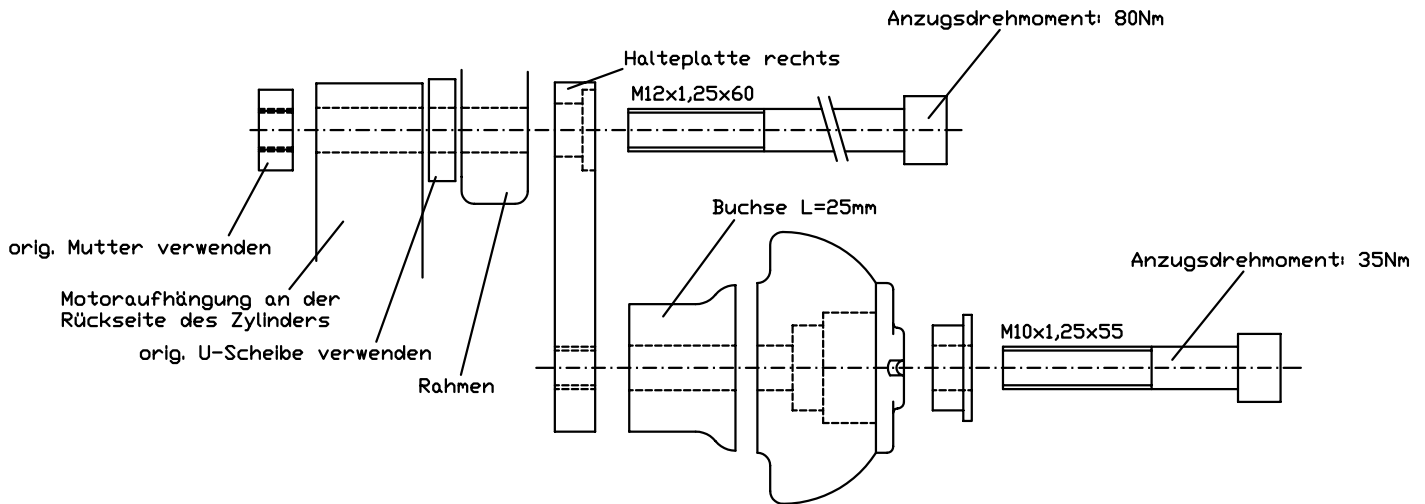

Anbau der linken Seite

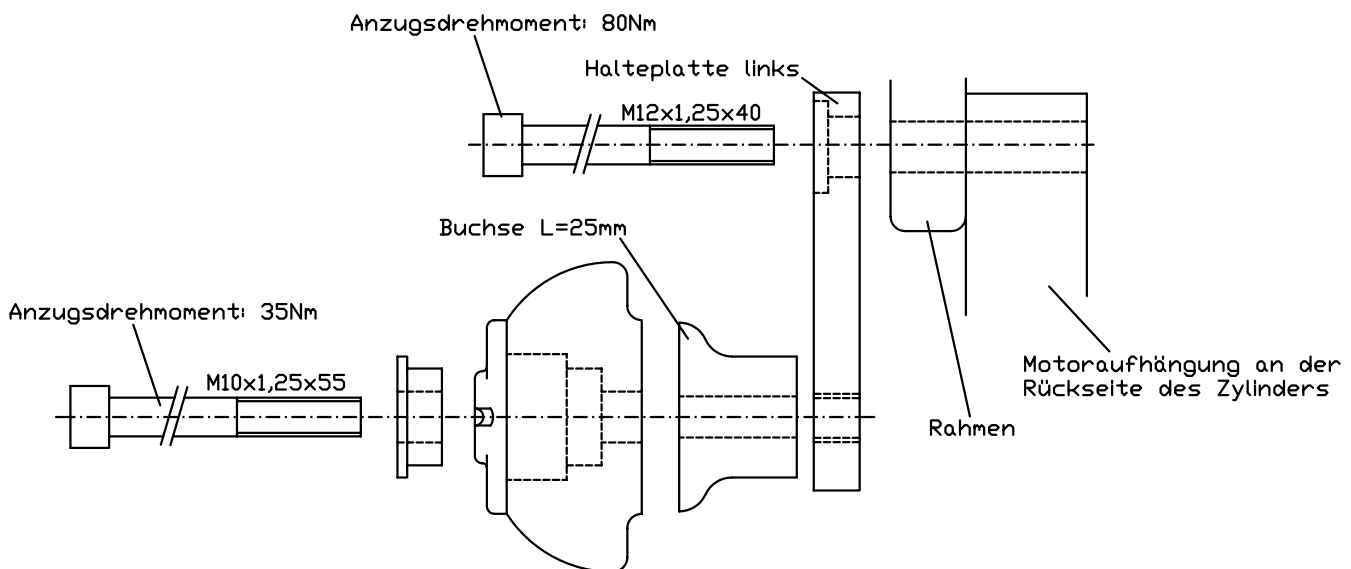

LSU
MOTORRADTECHNIK

Heinrich-Malina-Str.107 – 47809 Krefeld
Tel. +49-2151-5559 0 – Fax –548416

e-mail: info@lsl-motorradtechnik.de


Fitting instructions Crash- Pads Triumph Speed Triple T955i `05- Part.No.: 550T033

Important: If you are not a trained motorcycle mechanic Stopp now. Ask a local motorcycle shop to do the work for you.


Please take extra care!

The mounting of the crash-pads has to be done side by side! At all times you have to prevent that the engine mounting bolts are not loose at the same time!

Fitting on the right side

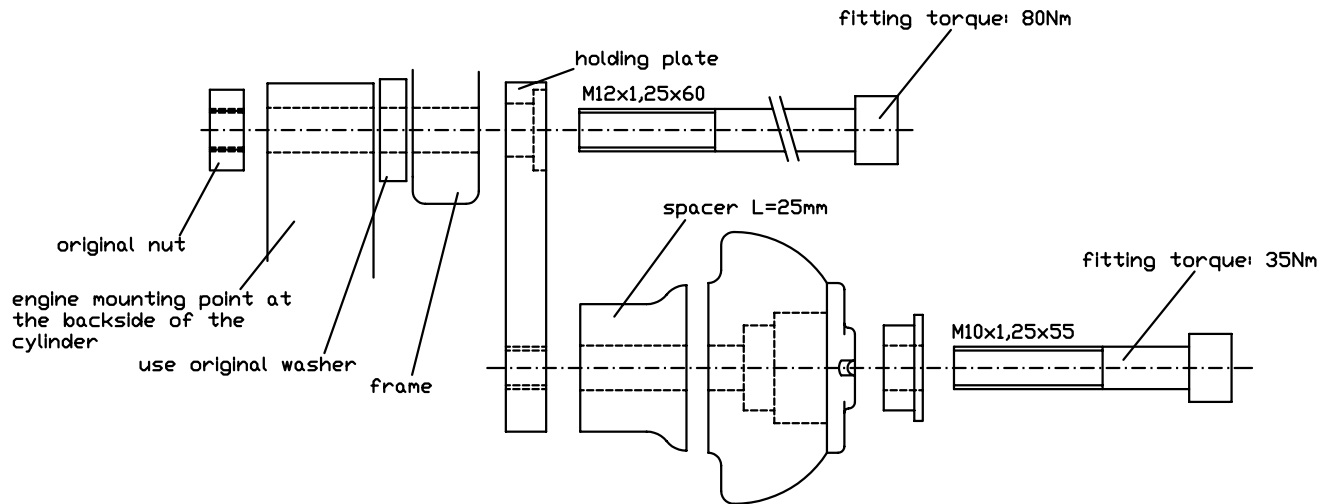

Fitting on the left side

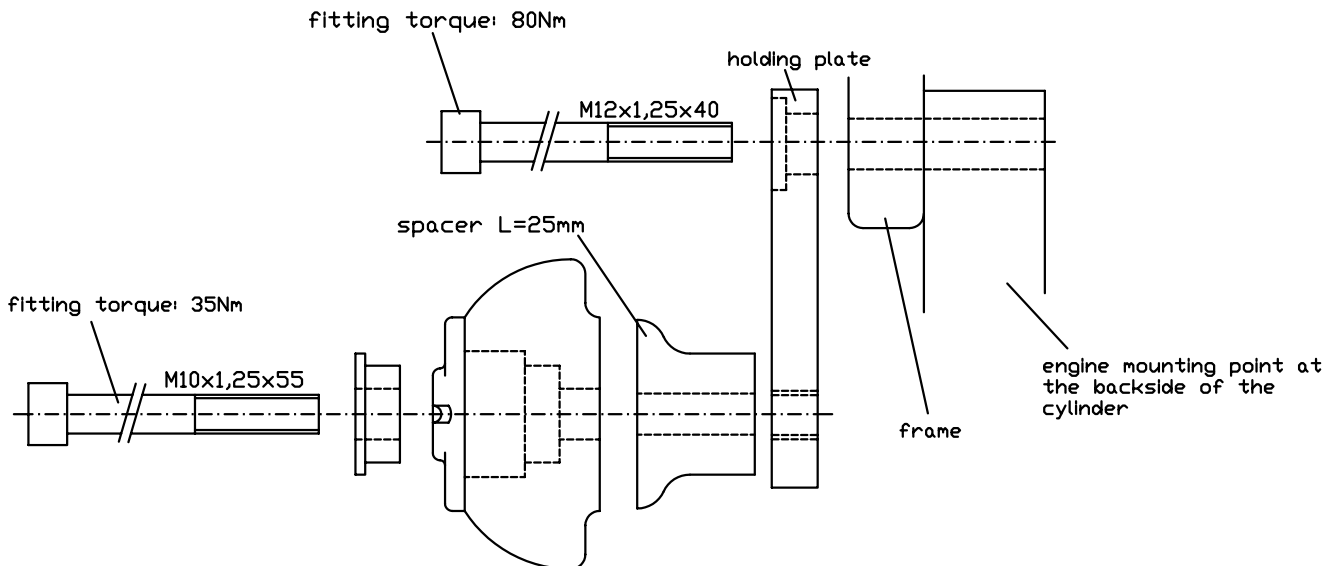

LSU
MOTORRADTECHNIK

D – 47809 Krefeld

www.lsl-motorradtechnik.de